



## Parts List

BPTA-O11DXL\_A3.0-BK






- A** CPU Water Block
- A-1 BPTA-CPUMS-V2-SKA .....1 pc
  - A-2 Intel Mounting Bracket .....1 pc
  - A-3 Backplane assembly .....1 set

- B** Fittings
- B-1 BPTA-DOTFH1622 .....2 pcs
  - B-2 BPTA-15ATFH16 .....2 pcs

- C** Accessory
- C-1 Hard tube .....6 pcs
  - C-2 Fitting + soft tube .....1 pc
  - C-3 CPU set

Thumb screw  
SPRING  
Thumb nut  
1mm Spacer  
M3x32mm Screw  
SC6-32M3  
Nylon cup washer



- C-4 BPTA-MKCPUMS-1700 or BPTA-MKCPUMS-1700-V2
- C-5 BP-CPUPDB-AMD5MS

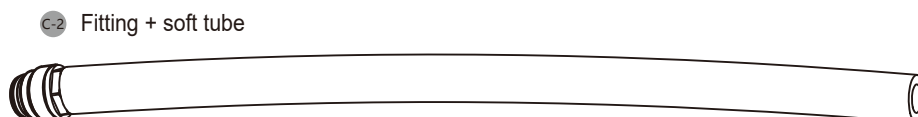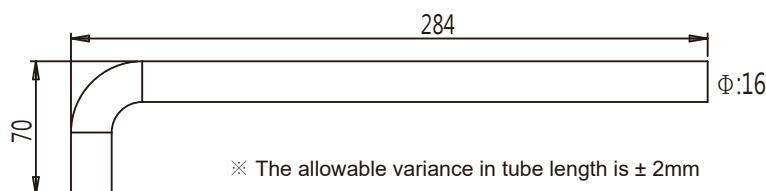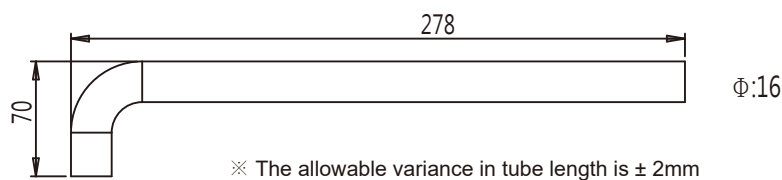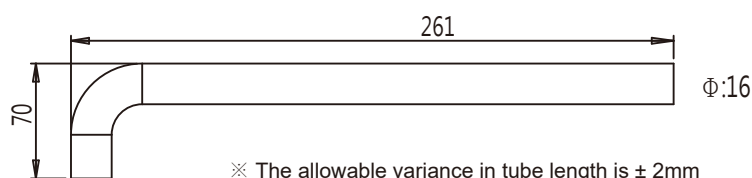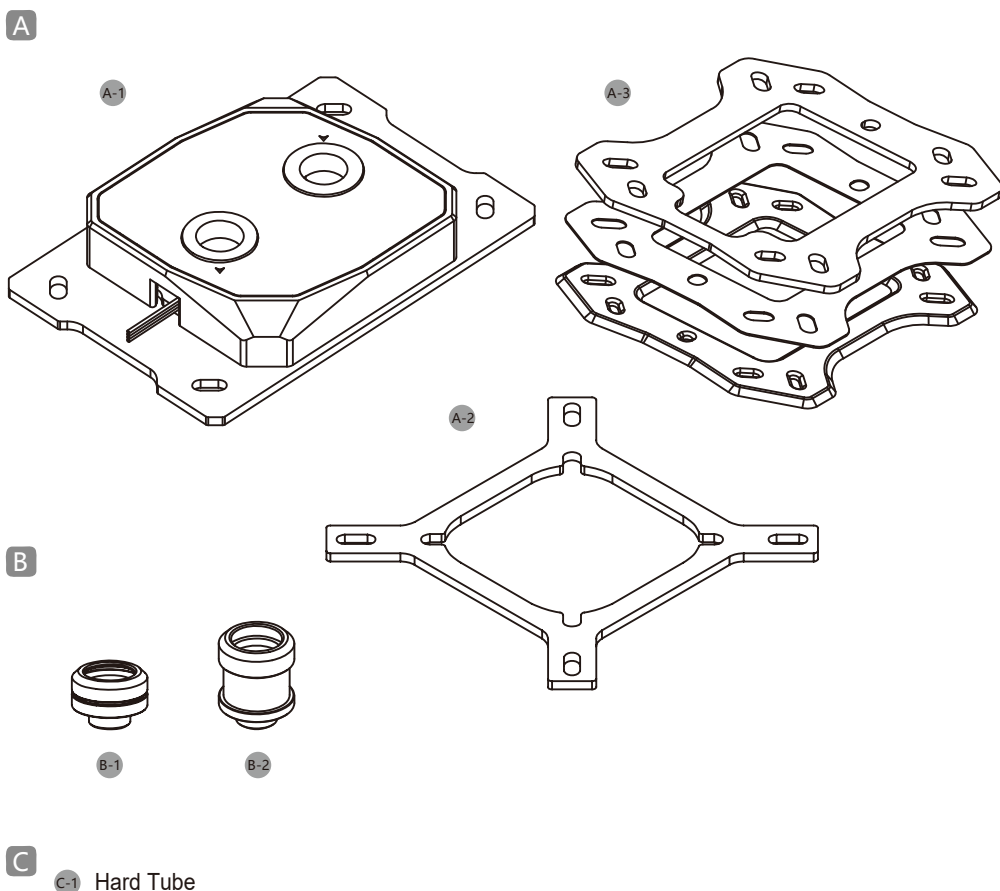

# I. AMD Motherboard system


Bitspower Fan and DRGB RF Remote Controller Hub (Not included) are now available at [microcenter.com](http://microcenter.com)

DRGB PIN on ❶ Motherboard or ❷ other equipment.

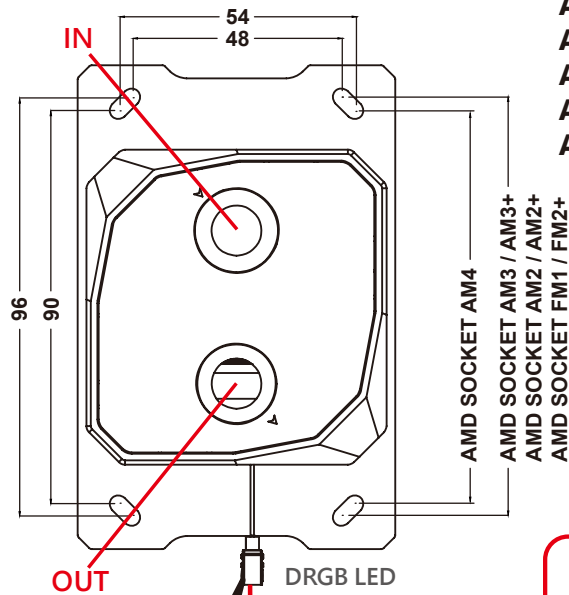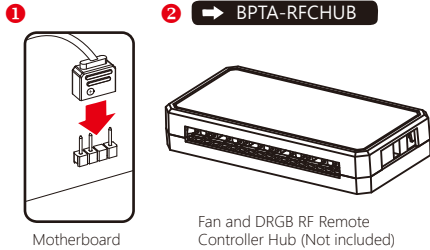



**AMD SOCKET 939 / 754 / 940**  
**AMD SOCKET AM4**  
**AMD SOCKET AM3 / AM3+**  
**AMD SOCKET AM2 / AM2+**  
**AMD SOCKET FM1 / FM2+**

The CPU water block has a DRGB cable, which can be connected to the DRGB extension cable of the radiator fans.

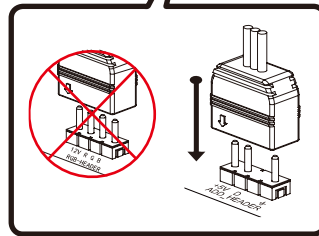


## Installation

Do not over-tighten the thumb screws. The springs should be slightly compressed, with visible gaps in the spring coils. Over-tightening may result in poor contact between the water block and CPU.

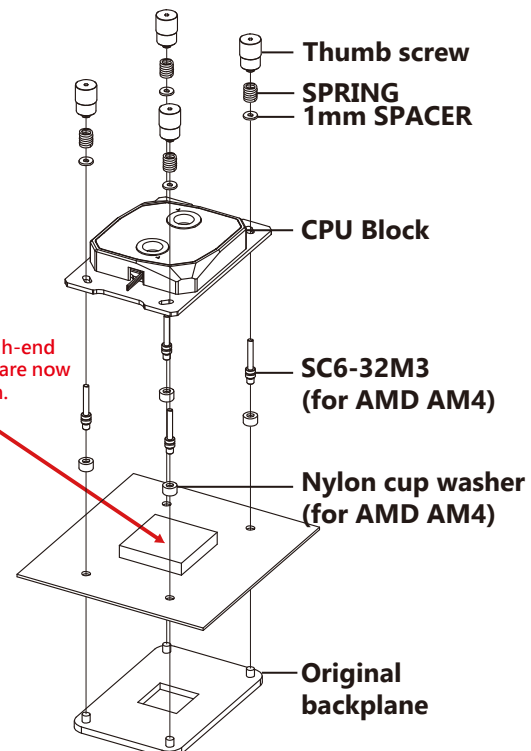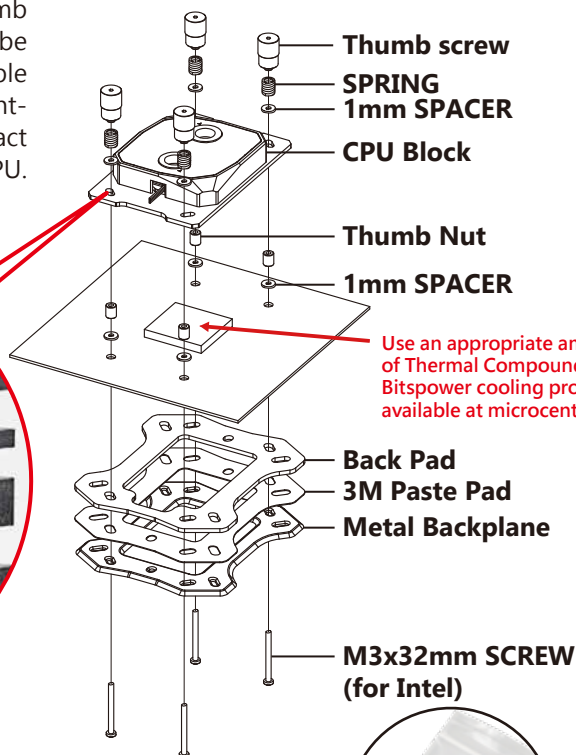

C-5 BP-CPUPDB-AMD5MS


- |                      |       |                 |       |
|----------------------|-------|-----------------|-------|
| <b>1</b> Thumb screw | 4 PCS | <b>3</b> Washer | 4 PCS |
| <b>2</b> Spring      | 4 PCS | <b>4</b> Stud   | 4 PCS |

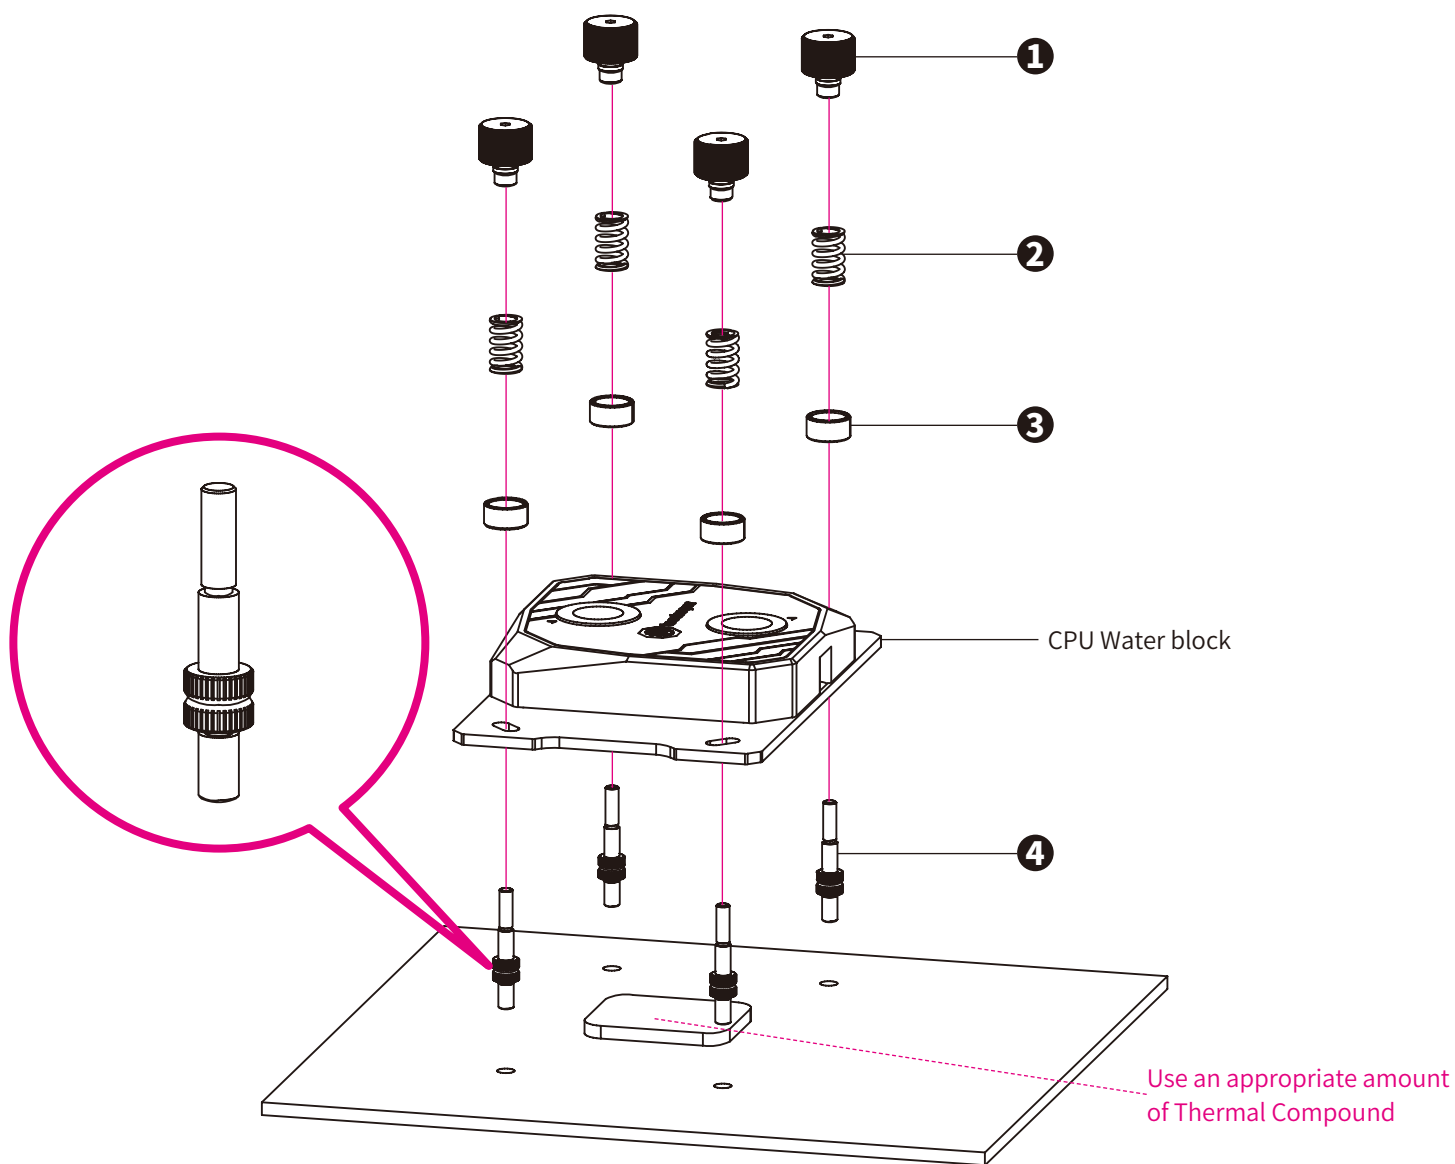


## II. AMD Chipset Installation


Titan One 3.0 is compatible with most ATX motherboards. If not compatible, please contact Bitspower directly, thank you.

### Step 1

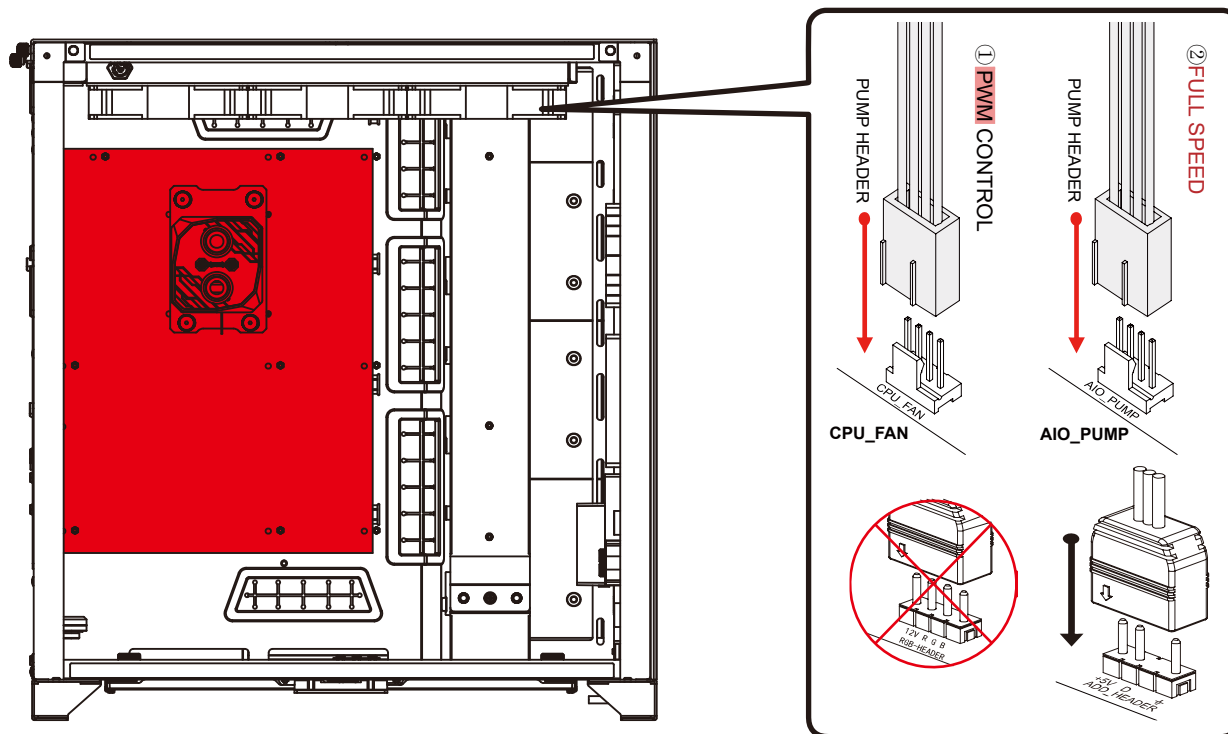

### Step 2


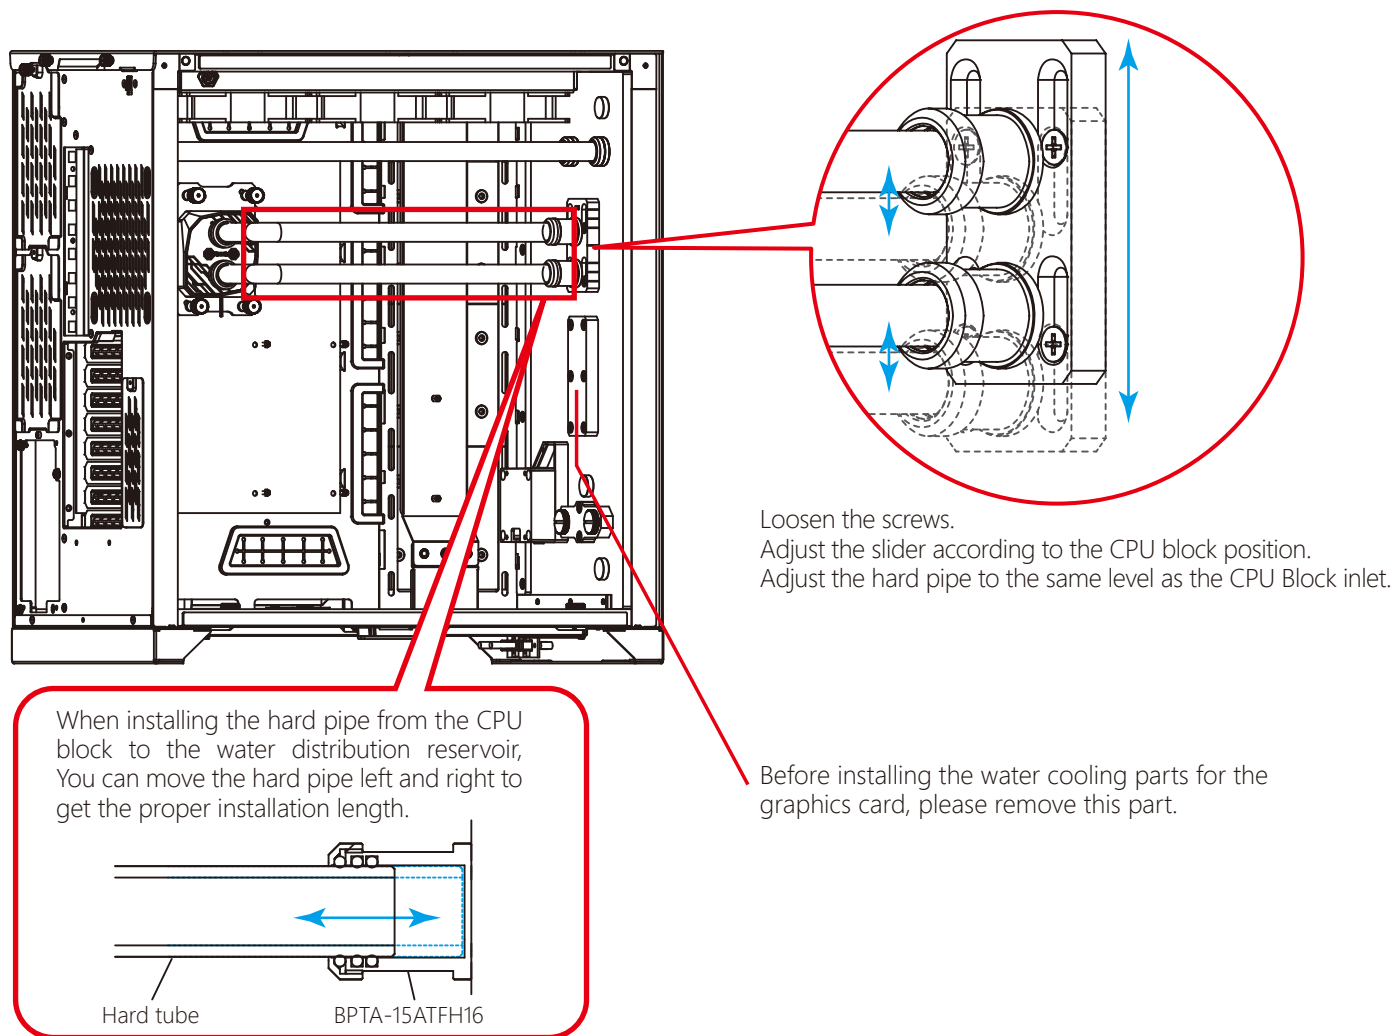


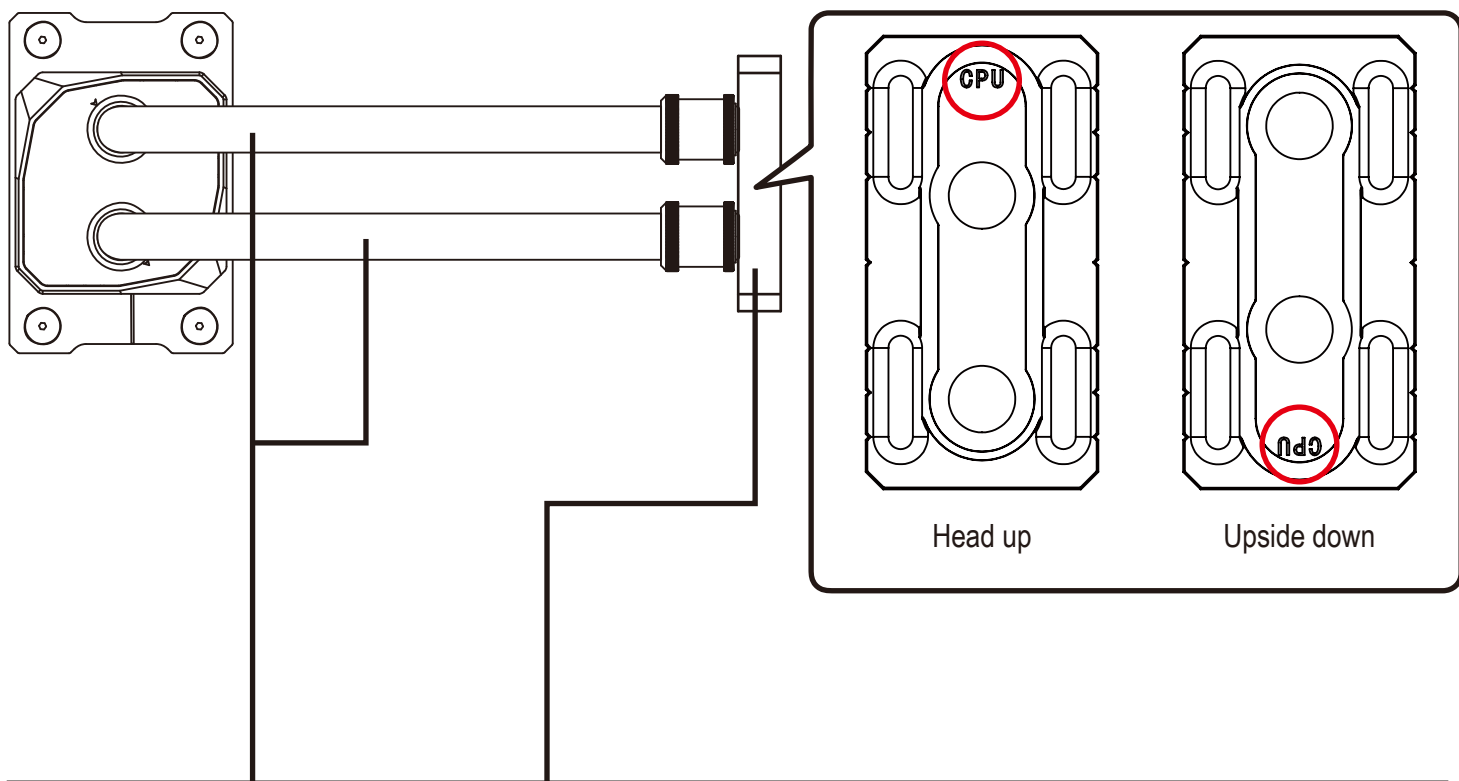

Hard Tube	Mounting orientation (CPU block position)	Motherboard	
70x278	Head up	Most ATX motherboards	
70x261	Head up	GIGABYTE	X670E AORUS MASTER


### III. Intel Motherboard system

Bitspower Fan and DRGB RF Remote Controller Hub (Not included) are now available at [microcenter.com](http://microcenter.com)  
 DRGB PIN on ❶ Motherboard or ❷ other equipment.

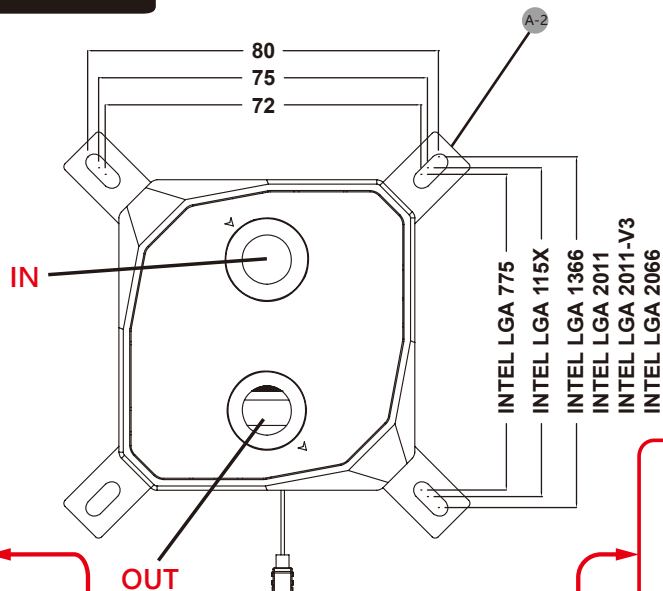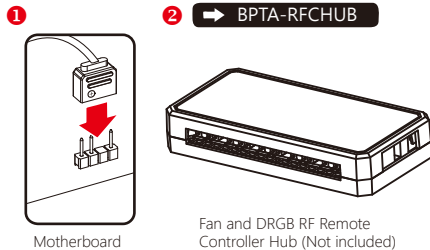

**INTEL LGA 775  
 INTEL LGA 115X  
 INTEL LGA 1366  
 INTEL LGA 2011  
 INTEL LGA 2011-V3  
 INTEL LGA 2066**


The CPU water block has a DRGB cable, which can be connected to the DRGB extension cable of the radiator fans.

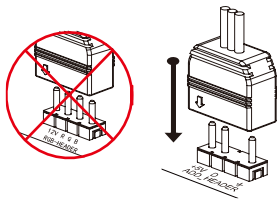


Do not over-tighten the thumb screws. The springs should be slightly compressed, with visible gaps in the spring coils. Over-tightening may result in poor contact between the water block and CPU.

#### Installation


##### Step 1

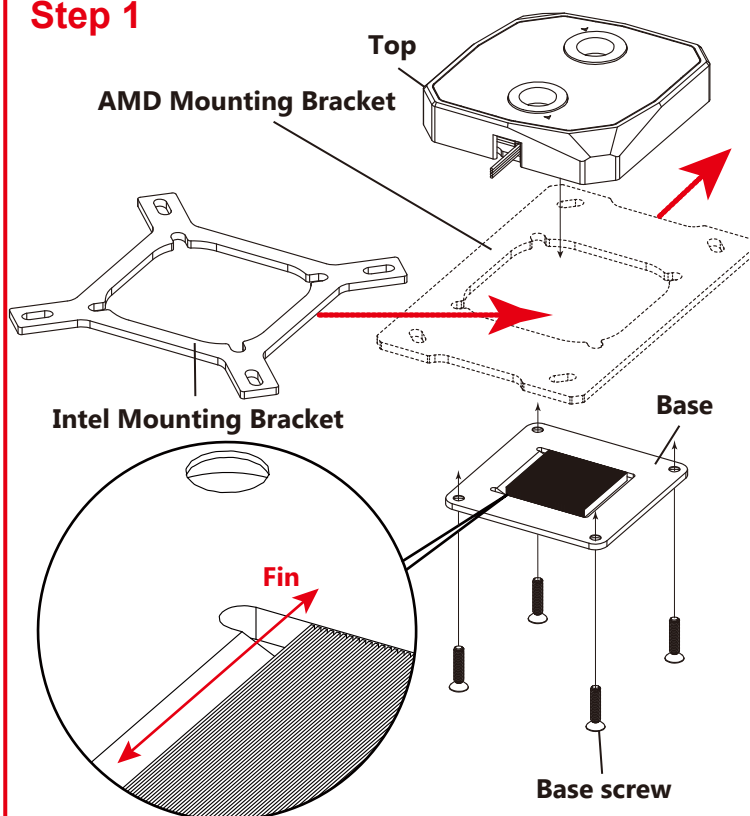

##### Step 2

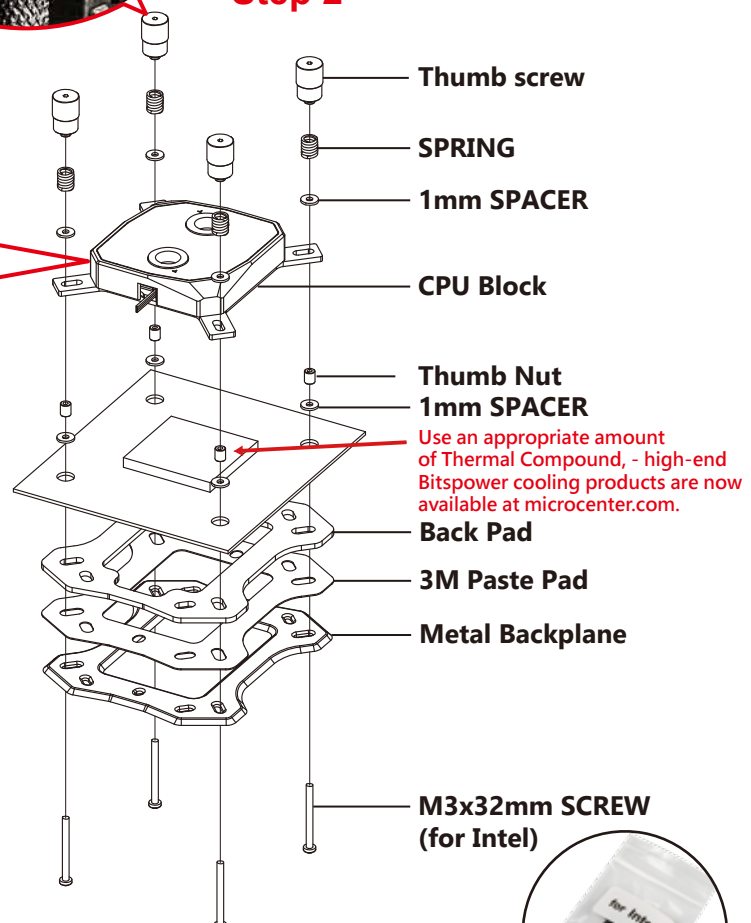

C-4 BPTA-MKCPUMS-1700(If you got this version, please refer to the following installation)

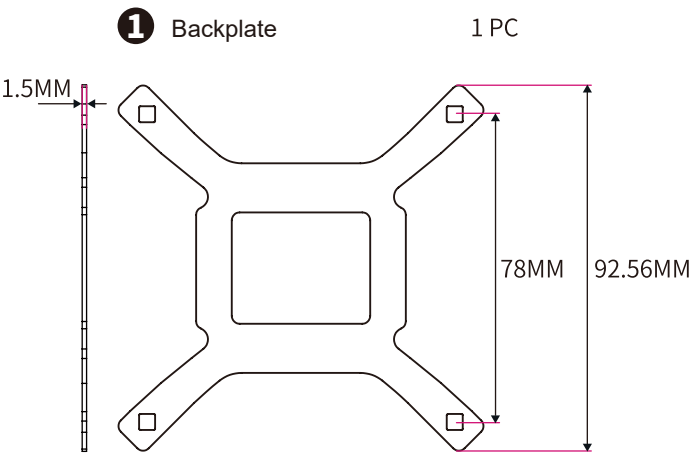

**2** Adjusting Nut 8 PCS



**3** Backplate Bolt 4 PCS




**4** Washer 4 PCS




Assembly steps


**step 1**

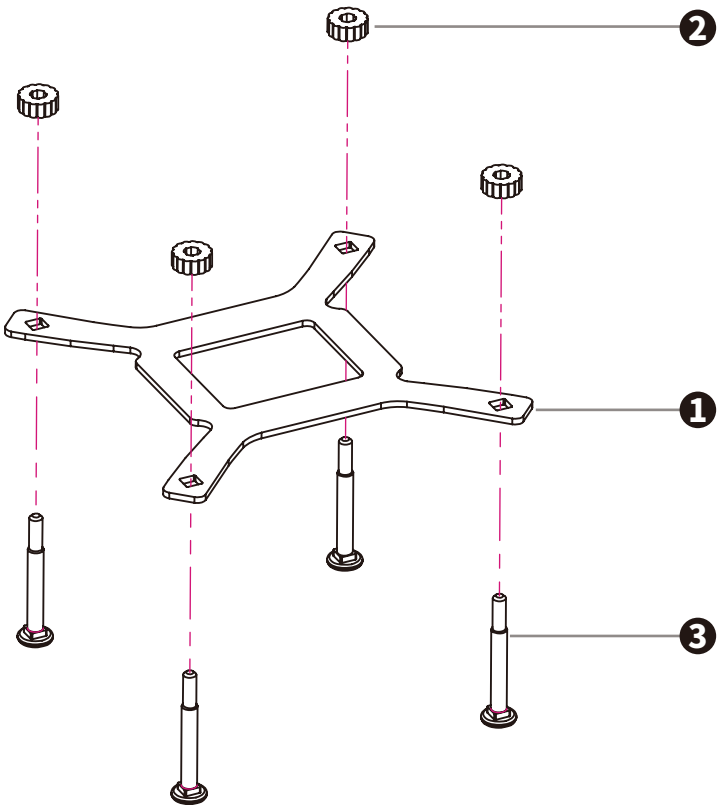

**step 2**

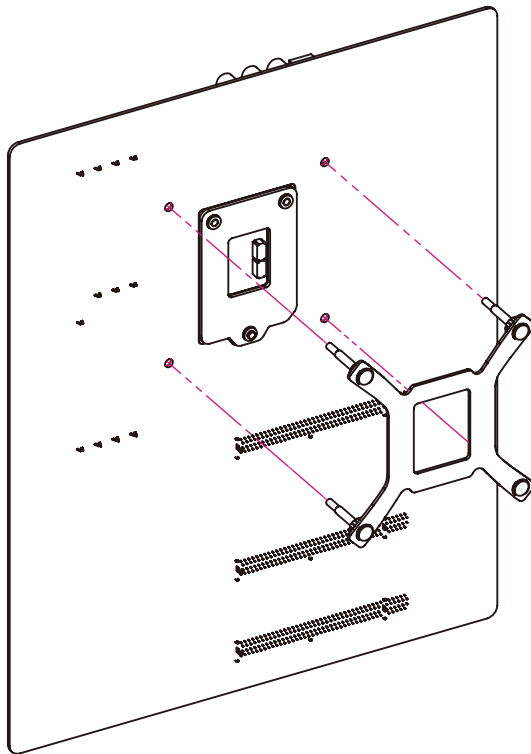


**step 3**

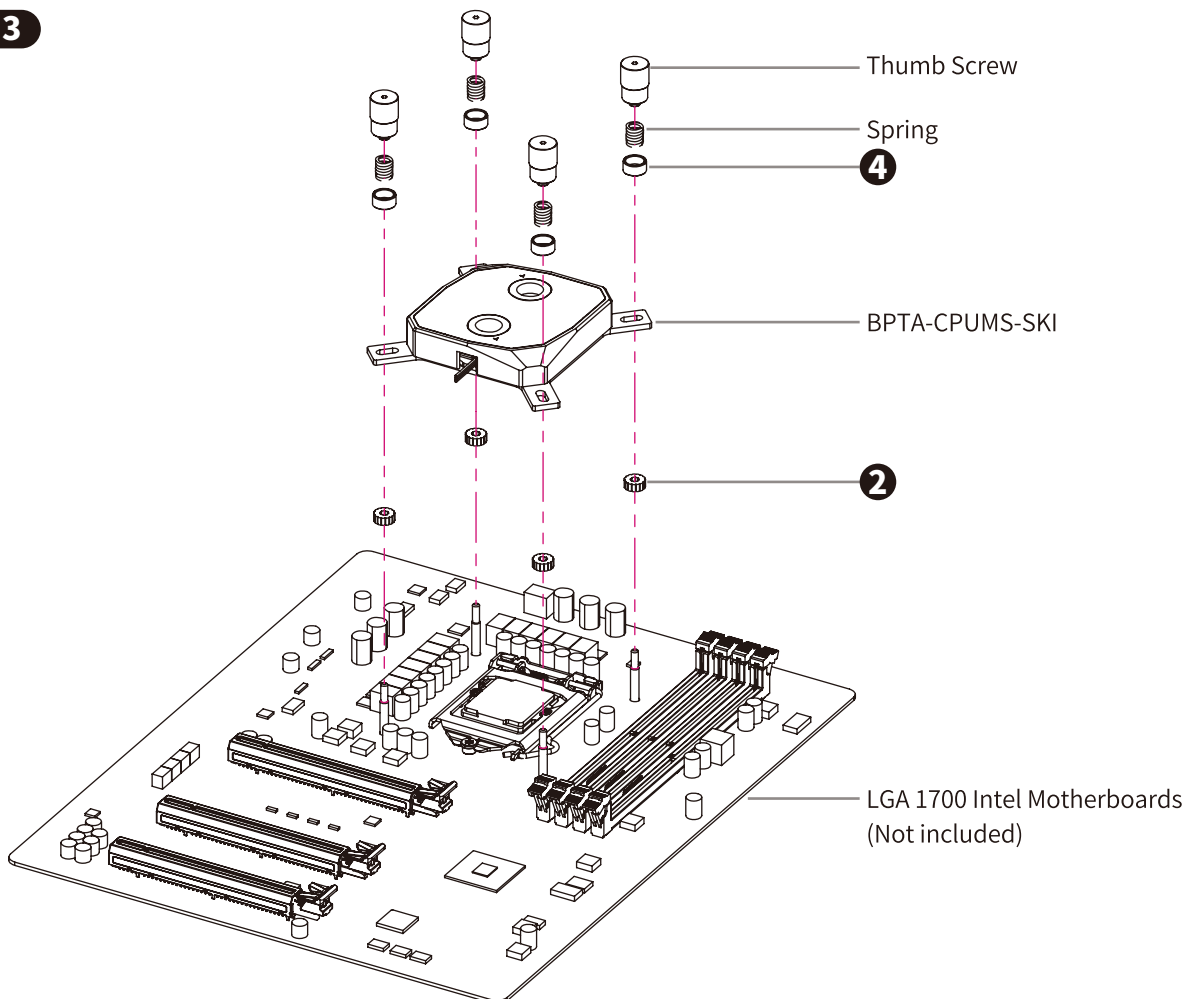



C-4 BPTA-MKCPUMS-1700-V2(If you got this version, please refer to the following installation)

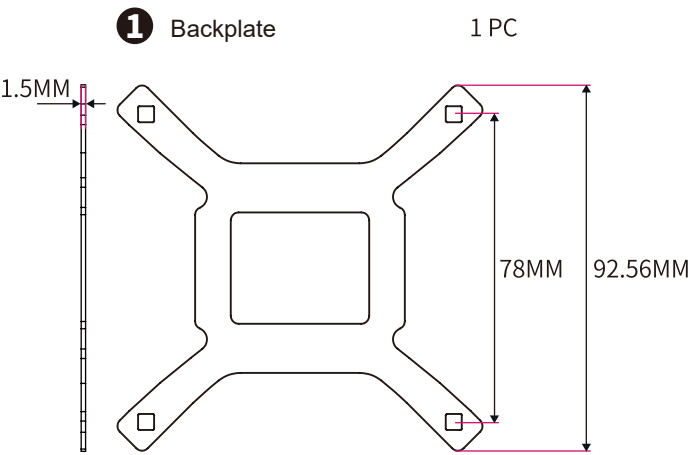

**2** Adjusting Nut 4 PCS



**3** Backplate Bolt 4 PCS



**4** Washer 4 PCS




**5** Standoffs 4 PCS




Assembly steps


**step 1**

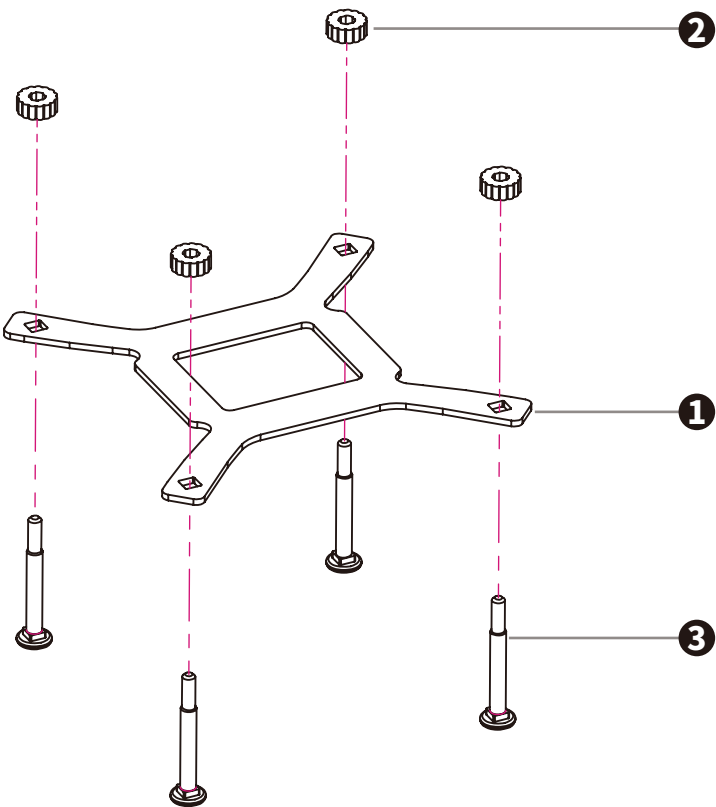

**step 2**

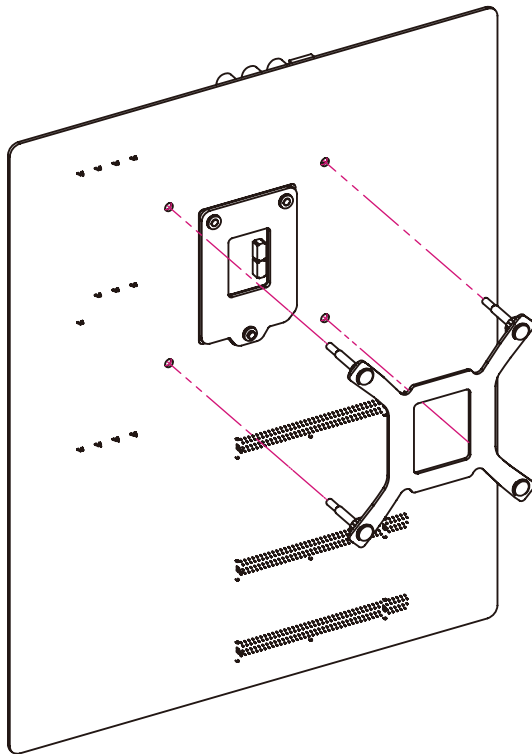


**step 3**

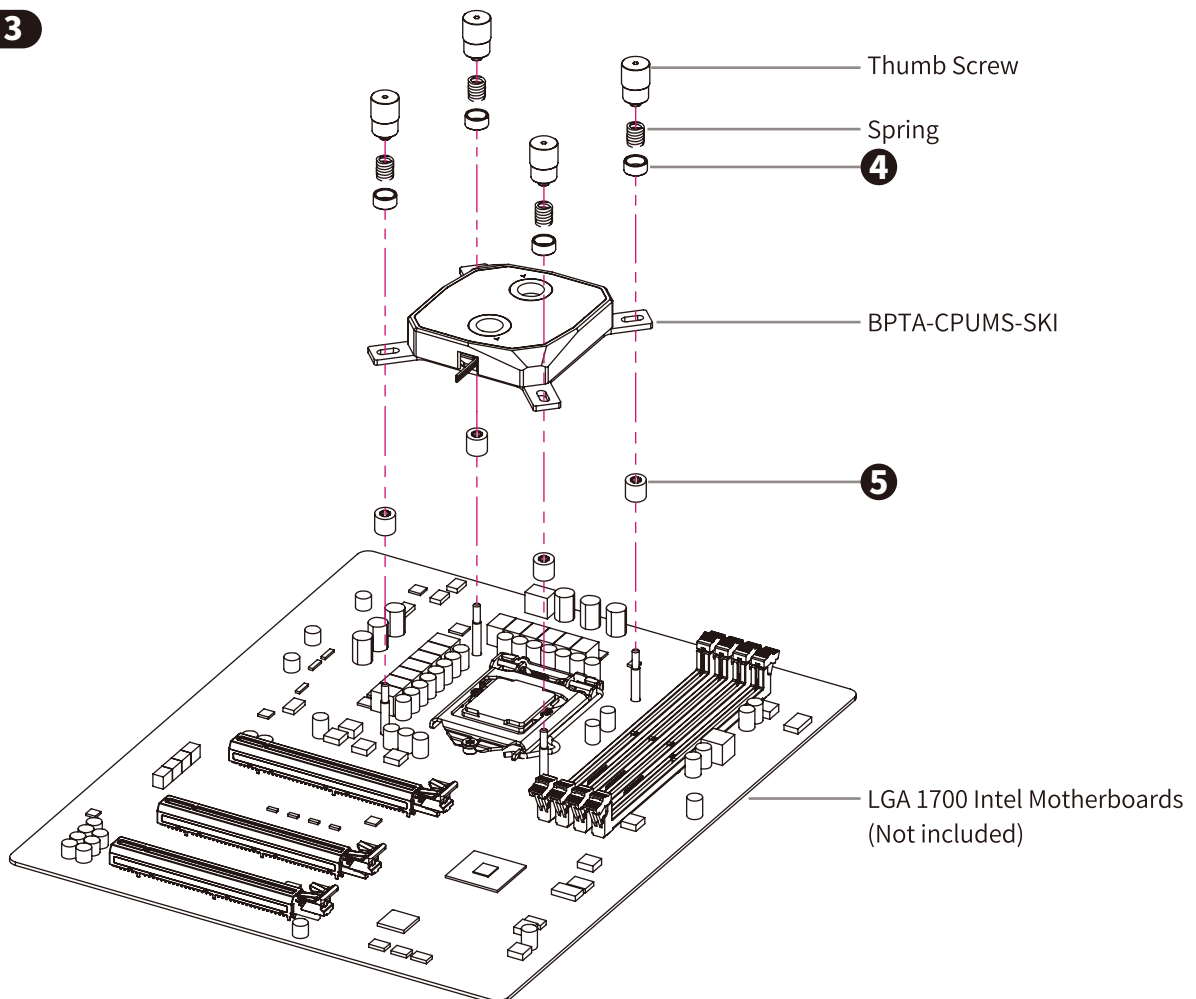


## IV. Intel Chipset Installation


Titan One 3.0 is compatible with most ATX motherboards. If not compatible, please contact Bitspower directly, thank you.

### Step 1

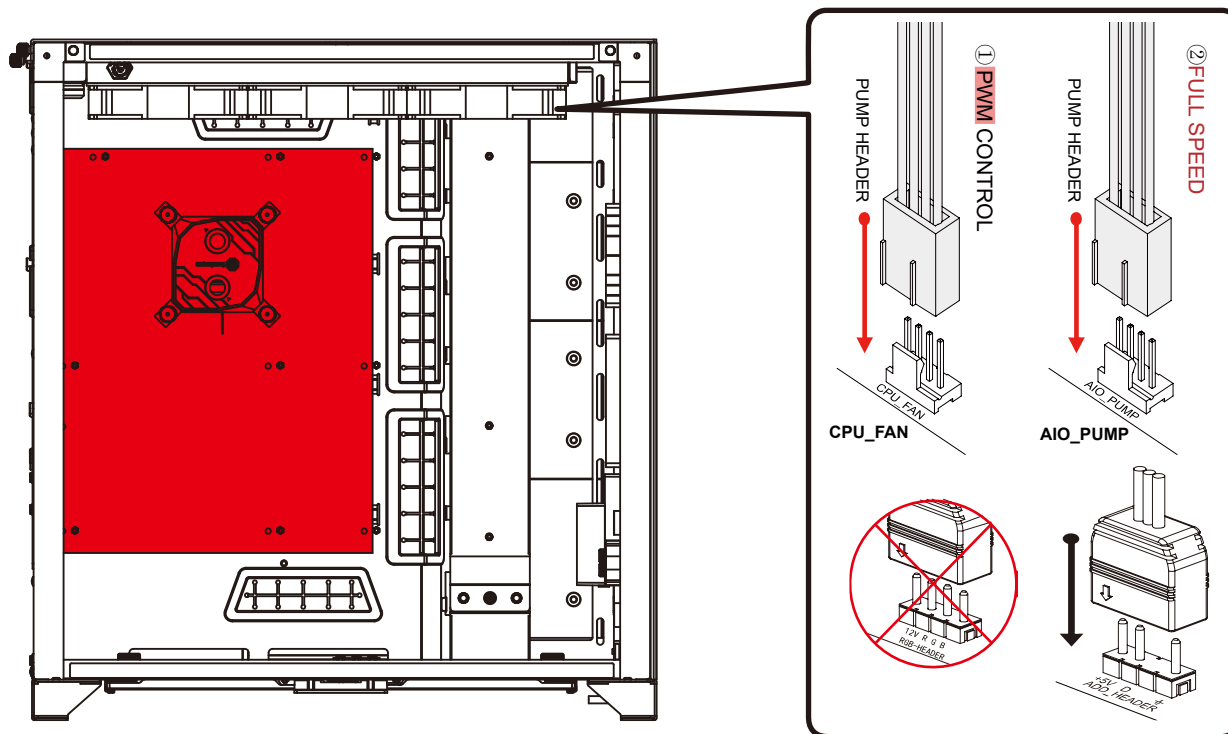

### Step 2

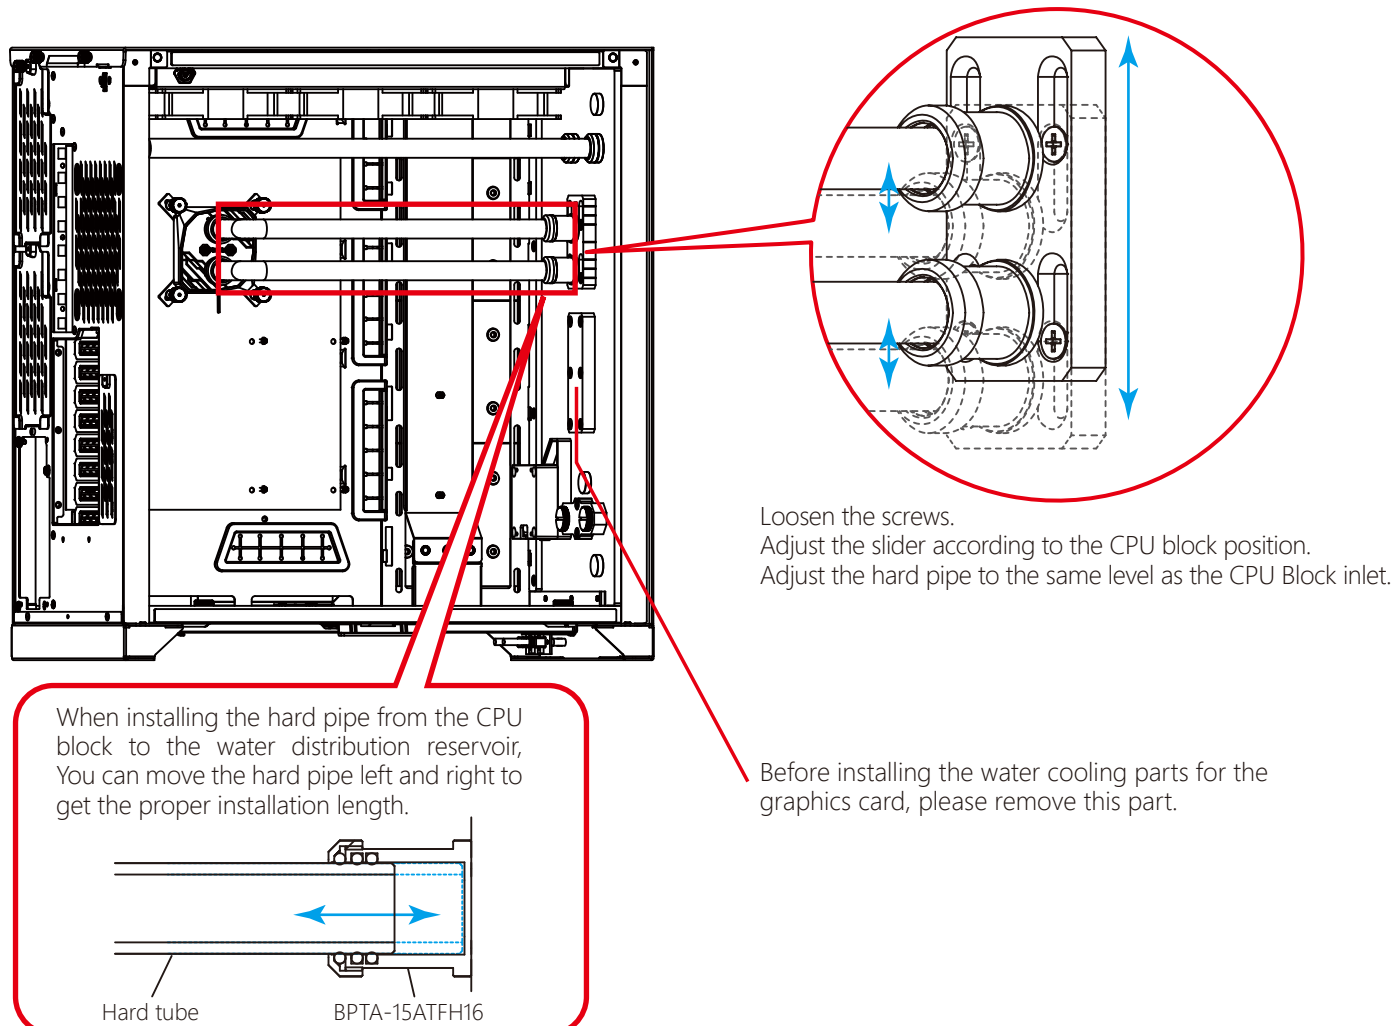

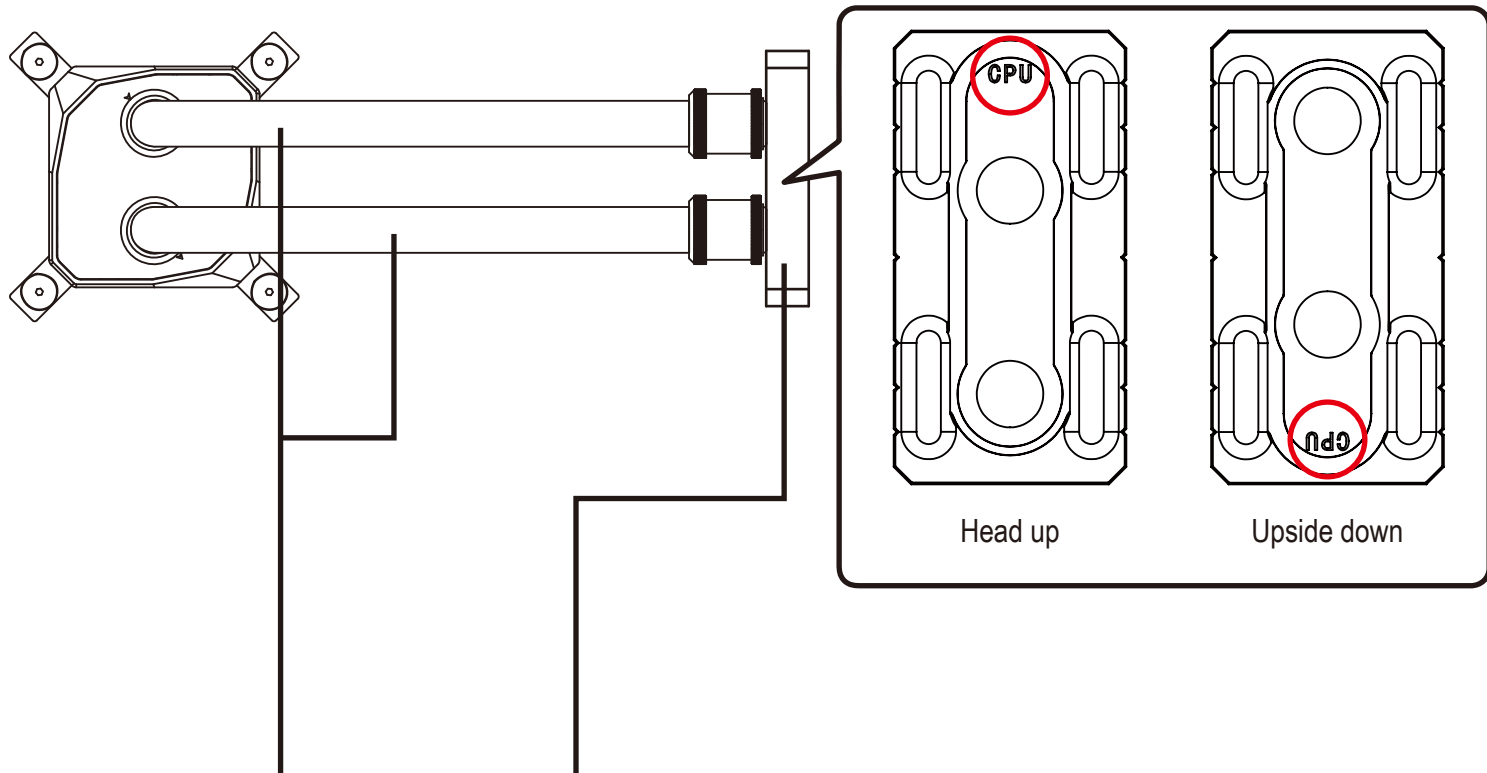


Hard Tube	Mounting orientation (CPU block position)	Motherboard	
70x278	Head up	Most ATX motherboards	
70x284	Upside down	ASUS	ROG MAXIMUS Z790 APEX
70x278	Head up	GIGABYTE	Z790 AORUS XTREME
70x284	Head up	GIGABYTE	Z790 AERO G
70x284	Upside down	BIOSTAR	Z790A-SILVER
70x278	Upside down	ASROCK	Z790 Taichi
70x261	Head up	MSI	PRO Z790-P WIFI DDR4

Pour the coolant into the reservoir via the water filling hole. Once the reservoir is 90% full, turn on the power supply for the pump to run and let the air exit the loop. Turn off the power supply when the reservoir is near empty. Repeat until all the air has exited the loop.

Notice : Do not turn on the pump if the reservoir is empty.


⚠ Bitspower recommends that consumers add the Bitspower coolant or purified water for their water-cooling liquid. If the consumer chooses different water-cooling liquids , the resulting impurities may cause peeling of the coating on some of the hardware, water channels blockage by built-up residue, improper operation of the water pump, water tank tube breakage, and o-rings deformation leading to leakage. Any issues related to the use of inappropriate water-cooling liquid will be the responsibility of the consumer.

⚠ In order to make the internal circulation of the water cooling system cleaner, and avoid the pump stuck by the precipitate, we advise you to rinse the water cooling system with distilled water in several times until the excluded water is clean.

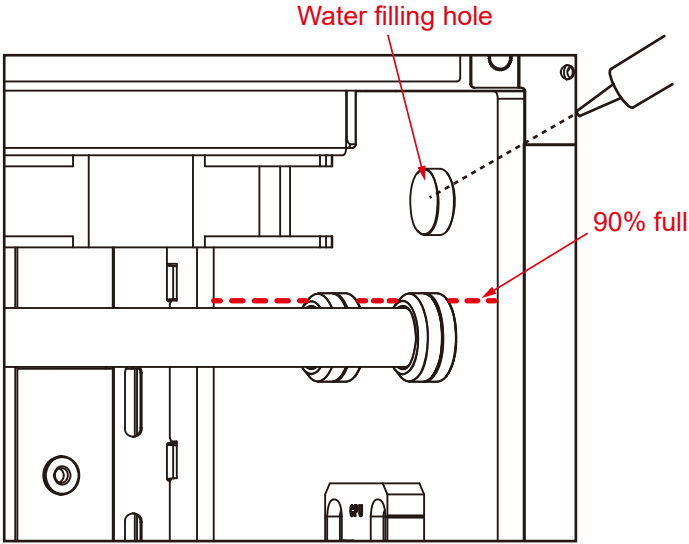


Suggest using the **normal mode** of the case when filling the water.


## V. BPTA-TOO11DXLA-K1M

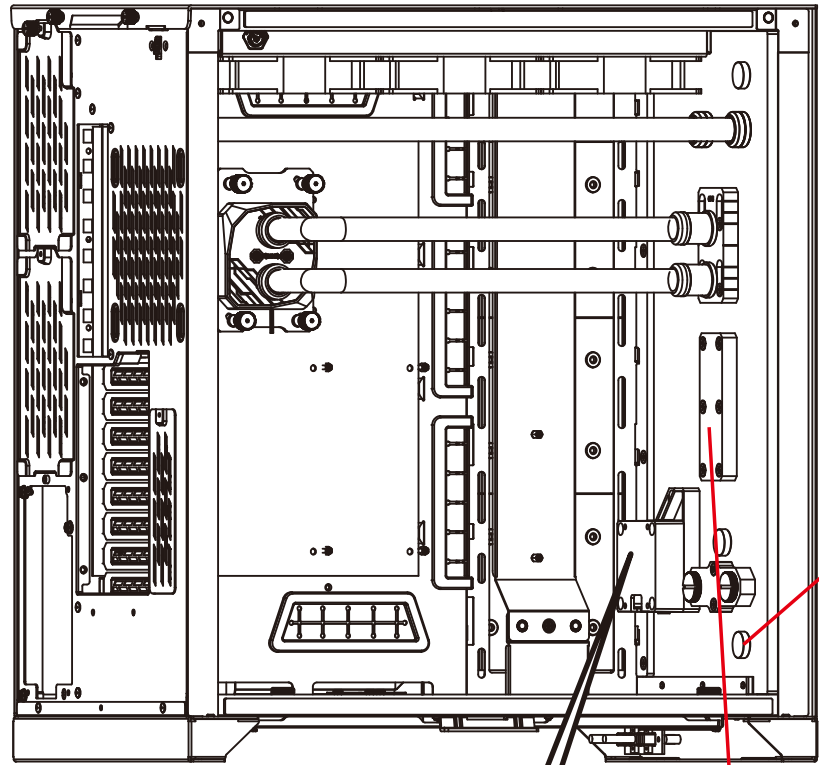


**BPTA-EFW**  
It is recommended to install the water-exhaust fitting at the lowest point of the water cooling system.

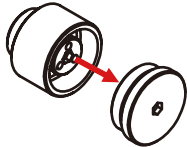

Step 1  
Unscrew the top of the water-exhaust fitting.

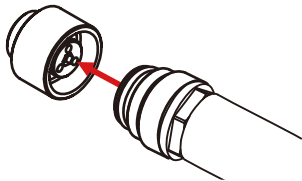

Step 2  
Replace with the water-exhaust part. When screwing in the part, water will start to discharge, it is recommended to connect tubing beforehand to control the water outflow.

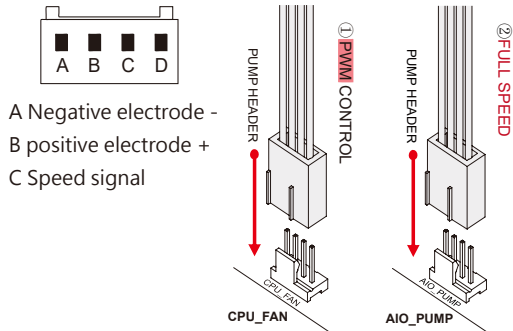

A Negative electrode -  
B positive electrode +  
C Speed signal

Pump Spec.  
Rated voltage : 12V DC  
Power consumption : 8.4W  
Maximum flow : 460±15%L/h  
Noise : ≤24dBA  
PWM : Yes  
MTBF : ≤15,000 hours  
Warranty : 2 years

## Notice

Before filling in the water, please make sure all the components are installed correctly. To prevent any leakage which may damage the PC components, please perform a 24-hour leaking test with only the pump connected to the power supply.

Bitspower reserves the right to change the product design and interpretations. These are subject to change without notice. Product colors and accessories are based on the actual product.

When using leak tester on water cooling loop, in order to avoid product damage due to excessive pressure, the input pressure should not exceed 0.5kg/cm<sup>2</sup> (Bar). If the product is damaged due to excessive pressure, it will be borne by the customer. Forbidden to use the leak tester when there is water in the loop or the pump is running.

Bitspower recommends to use of distilled or pure water or Bitspower Pellucid Coolant as the water-cooling liquid. Also, the consumer can add Bitspower Dye to Pellucid Coolant for the color requirement. But please do not add any biocide by yourself. If the consumer chooses different water-cooling liquids, the resulting impurities may cause peeling off the coating on some of the hardware, water channels blockage by built-up residue, improper operation of the water pump, water tank tube breakage, and O-rings deformation or loss sealing leading to leakage. Any issues related to the use of inappropriate water-cooling liquid will be the responsibility of the consumer.

Do not turn on the pump if the reservoir is empty.

## About PSU

Please go to the website or scan the QR CODE to download the manual.

[www.fsplifestyle.com/en/product/HYDROGPRO1000W\\_GEN5.html](http://www.fsplifestyle.com/en/product/HYDROGPRO1000W_GEN5.html)

